









REGULAR BRICKS

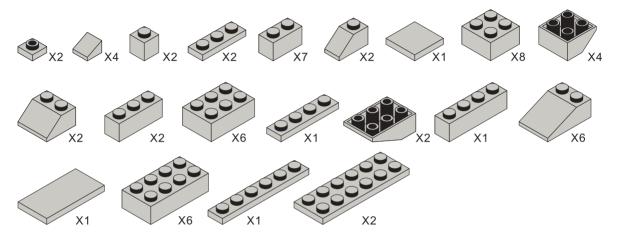

 
STAX

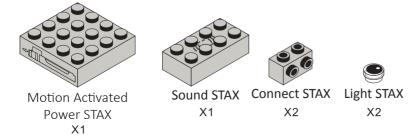


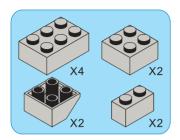







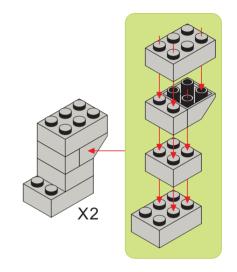


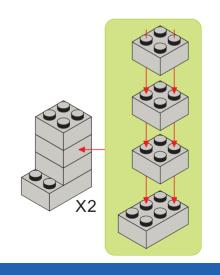


 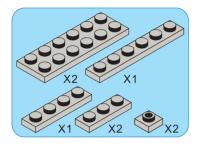


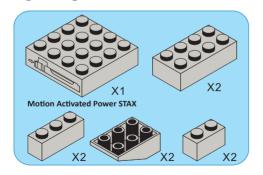




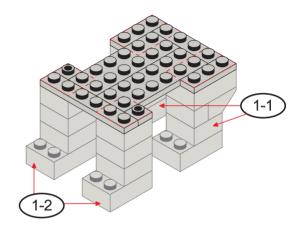


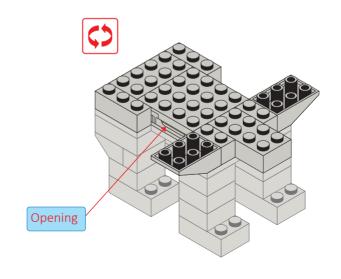





 


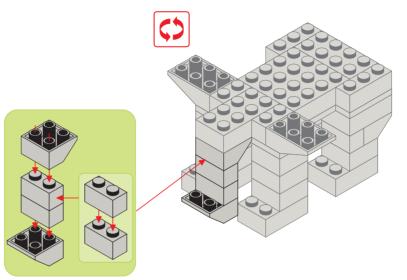

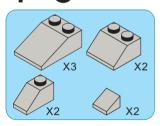


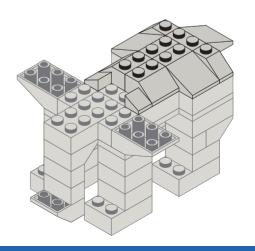


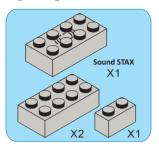







 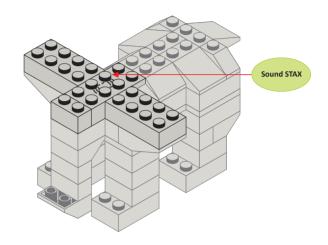


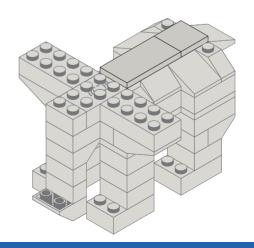


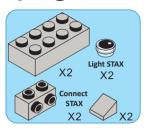




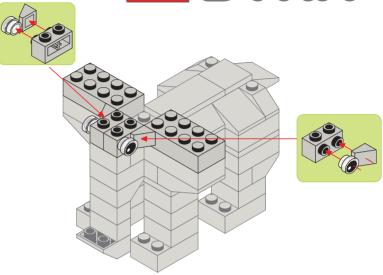



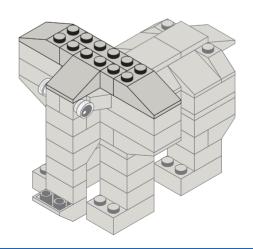




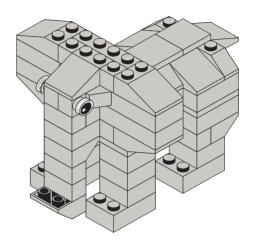



Special instructions:

1. For easy replacement of button cell battry CR2032

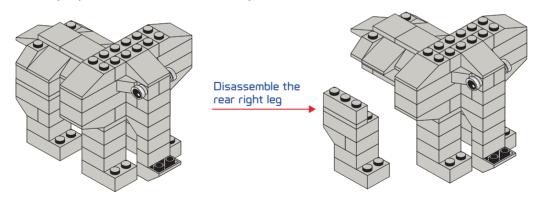

- 2. To replace the CR2032 button cell battery, please see the 4x4 Motion Activated Power STAX Instruction manual.
- 3. As an upgrade, to avoid using batteries, we recommend replacing the button cell Power STAX with the rechargeable 4x4 Mobile Power STAX (Item# S-11503). You can purchase this from your STAX retailer or directly through our webshop at www.lightstax.eu!